
Pasos de instalación:

1. Llene la botella de jabón con jabón líquido para el primer uso.
2. Mantenga presionado el botón hasta que el jabón líquido se dispense por la boquilla.
3. Ponga la mano debajo de la boquilla para dispensar el jabón líquido en la palma de la mano.

Los dispensadores de jabón tienen cuatro configuraciones para ajustar la dispensación de jabón, siendo el engranaje 1 el de menor volumen y el 4 el de mayor.
La configuración de fábrica está en el engranaje 2.

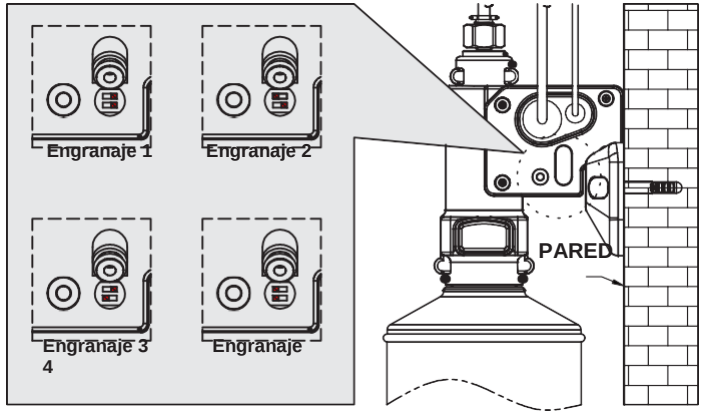


CUIDADO Y MANTENIMIENTO

Si el dispensador de jabón no funciona correctamente, compruebe primero que todas las conexiones estén herméticas y libres de fugas de aire. Si el dispensador sigue sin funcionar, coloque el colector en una botella de agua caliente. Bombee el agua caliente a través del dispensador para desalojar cualquier residuo de jabón seco y luego vuelva a colocar el colector en la botella de jabón.

Las marcas de agua y los residuos de jabón en las superficies de cromo pulido se limpian mejor con agua tibia y un detergente suave. Use un limpiador de acero inoxidable para los dispensadores de jabón de acero inoxidable cepillado. Nunca utilice un paño abrasivo para eliminar manchas difíciles. Séquelo con un paño limpio y suave.

Dispensador de jabón automático

INSTRUCCIONES

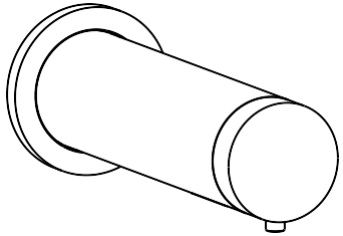

Gracias por elegir nuestros productos.

Por favor, lea este manual cuidadosamente antes del uso.


Ref.: 9631045SMD / 12/10/2026

Especificaciones:

Nº de modelo	DJ003AC & DJ003AB
Material	Latón
Fuente de alimentación	AC:220V
	DC: 6V (4xAA)
Capacidad de la botella	1, 6-2L
Temp. ambiente	Temperatura normal
Rango del sensor	15±3cm
Viscosidad	100-3500cp(mpA·s)


**Disponible en versión AC (-120V): 100–240 V (50/60 Hz)

Instalación:

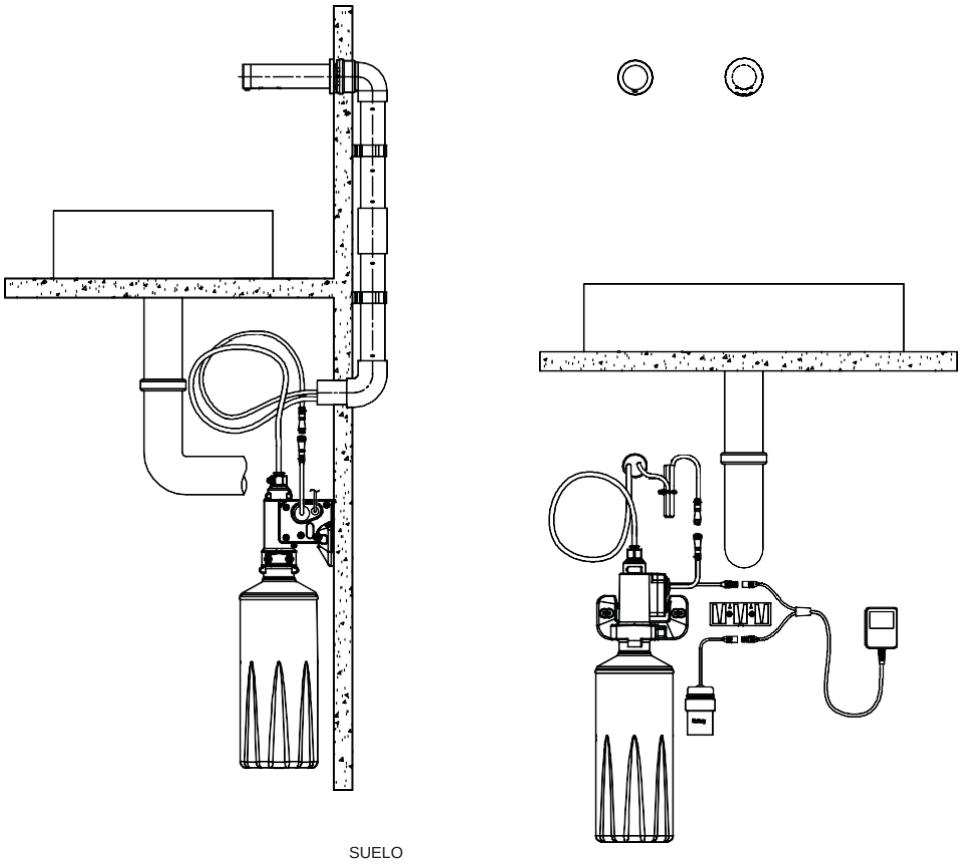

SUELO


Encaste en:

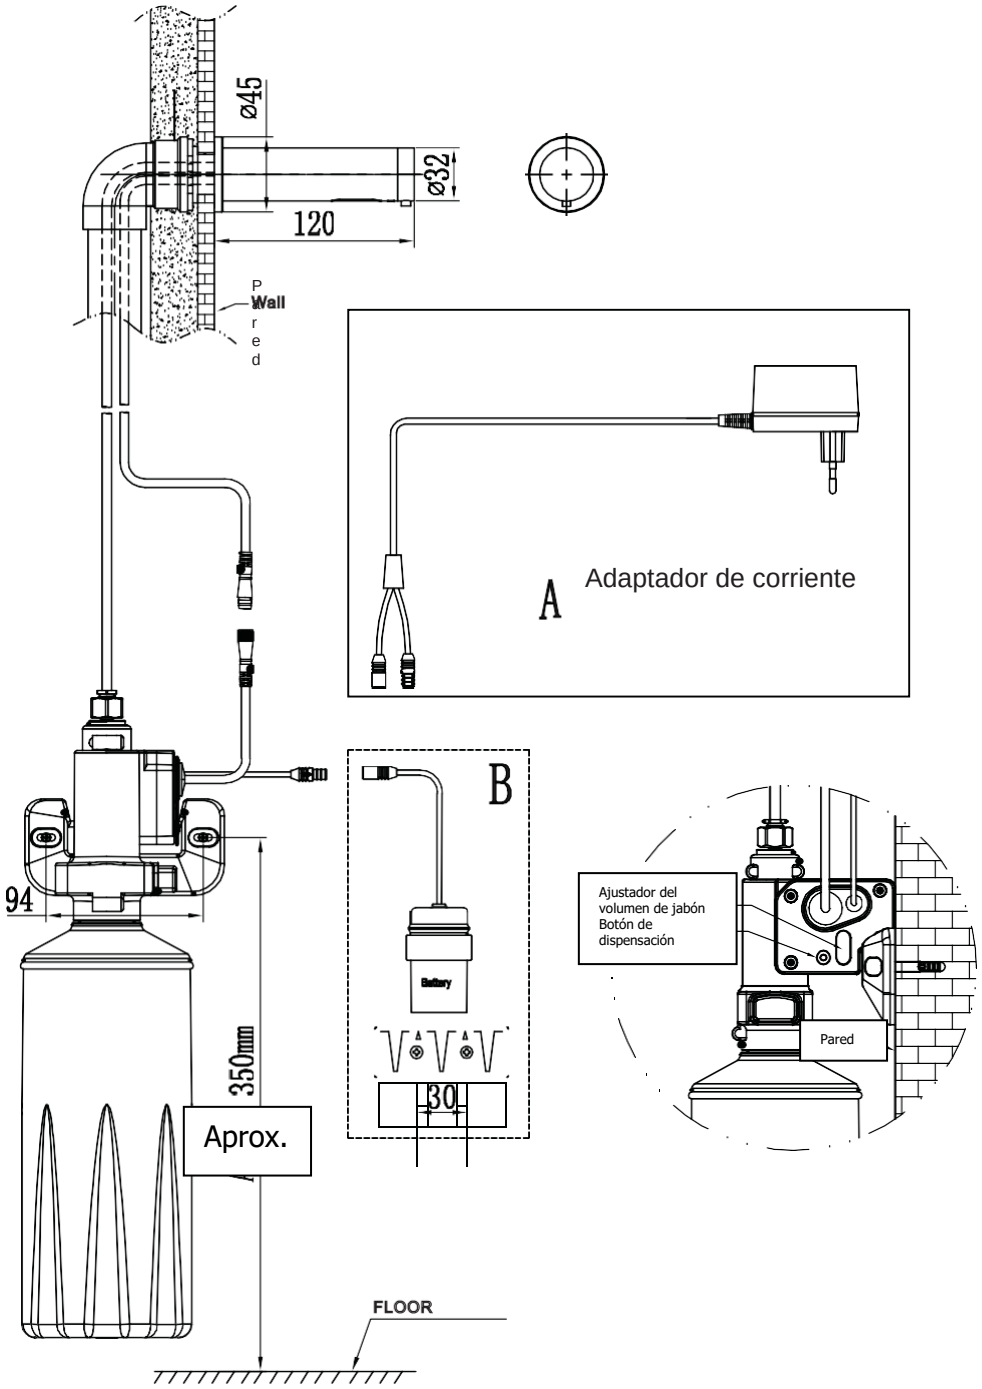

Installation steps:

1. Fill the soap bottle with liquid soap for the first use.
2. Press and hold button until liquid soap is dispensed from the nozzle.
3. Place hand below the nozzle to dispense liquid soap into palm of hand.

The soap dispensers have 4 settings to adjust dispense of soap, the first gear being the least volume and the fourth being maximum.
Factory default is set at second gear.

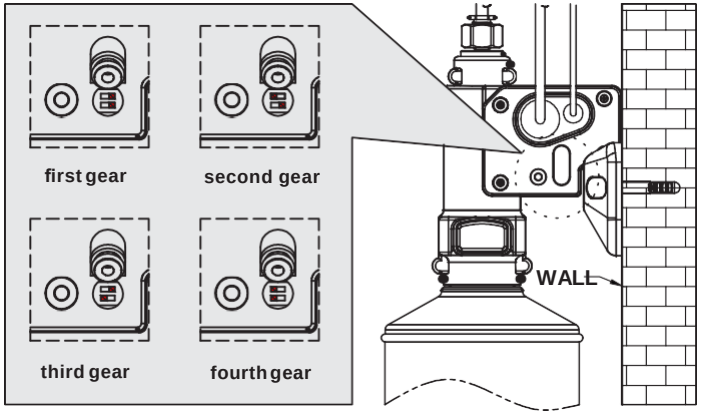


CARE AND MAINTENANCE

If the soap dispenser fails to function correctly, firstly check all connections are tight and free from air leaks. If dispenser still fails to function, place manifold into a bottle of warm water. Pump the warm water through the dispenser to dislodge any dried soap residue and then refit manifold into soap bottle.

Water marks and soap residue on polished chrome surfaces are best cleaned using warm water and a mild detergent. Use a stainless steel cleaner for brushed stainless steel soap dispensers. Never use an abrasive cloth to remove stubborn stains. Dry with a soft clean cloth.

Automatic soap dispenser

INSTRUCTION

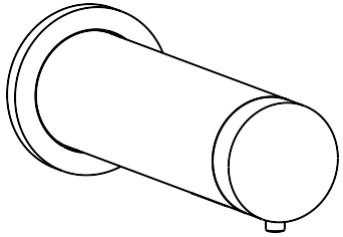

Thank you for choosing our products.

Please read this manual carefully before use.


Ref.: 9631045SMD / 12/10/2026

Specifications:


Model No.	DJ003AC & DJ003AB
Material	Brass
Power Supply	AC:220V
	DC:6V (4xAA)
Bottle Capacity	1.6-2L
Ambient Temp.	Normal Temperature
Sensor Range	15±3cm
Viscosity	100-3500cp(mpA·s)

**Available AC verisón
(-120V): 100–240 V (50/60 Hz)

Installation:

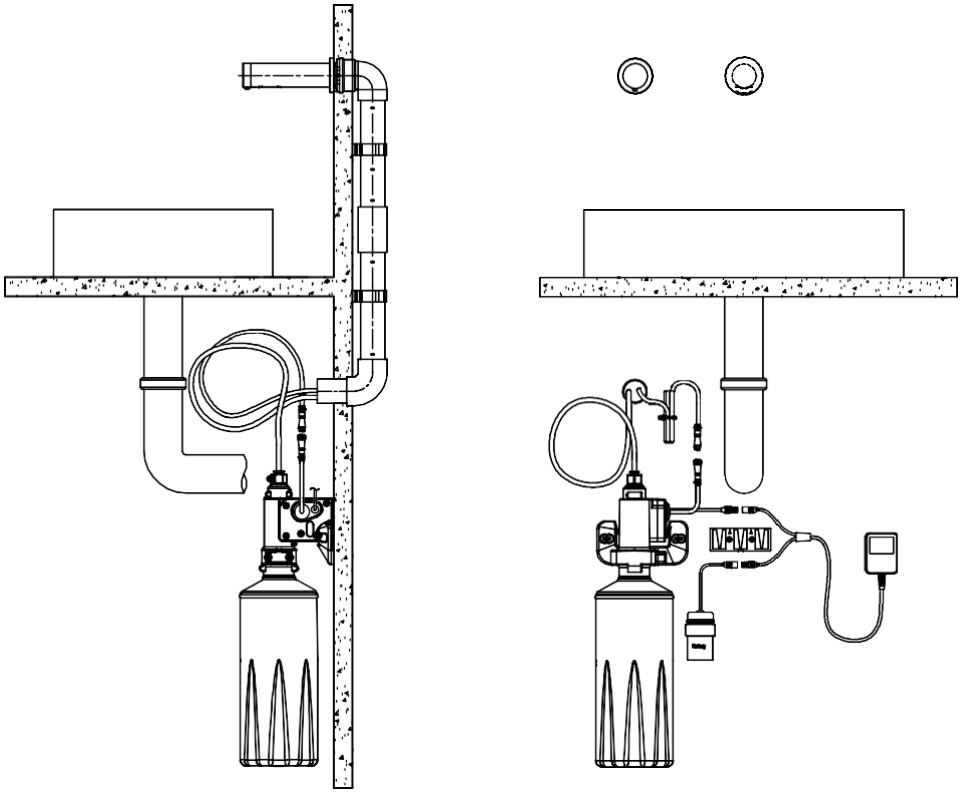


Roughing in:

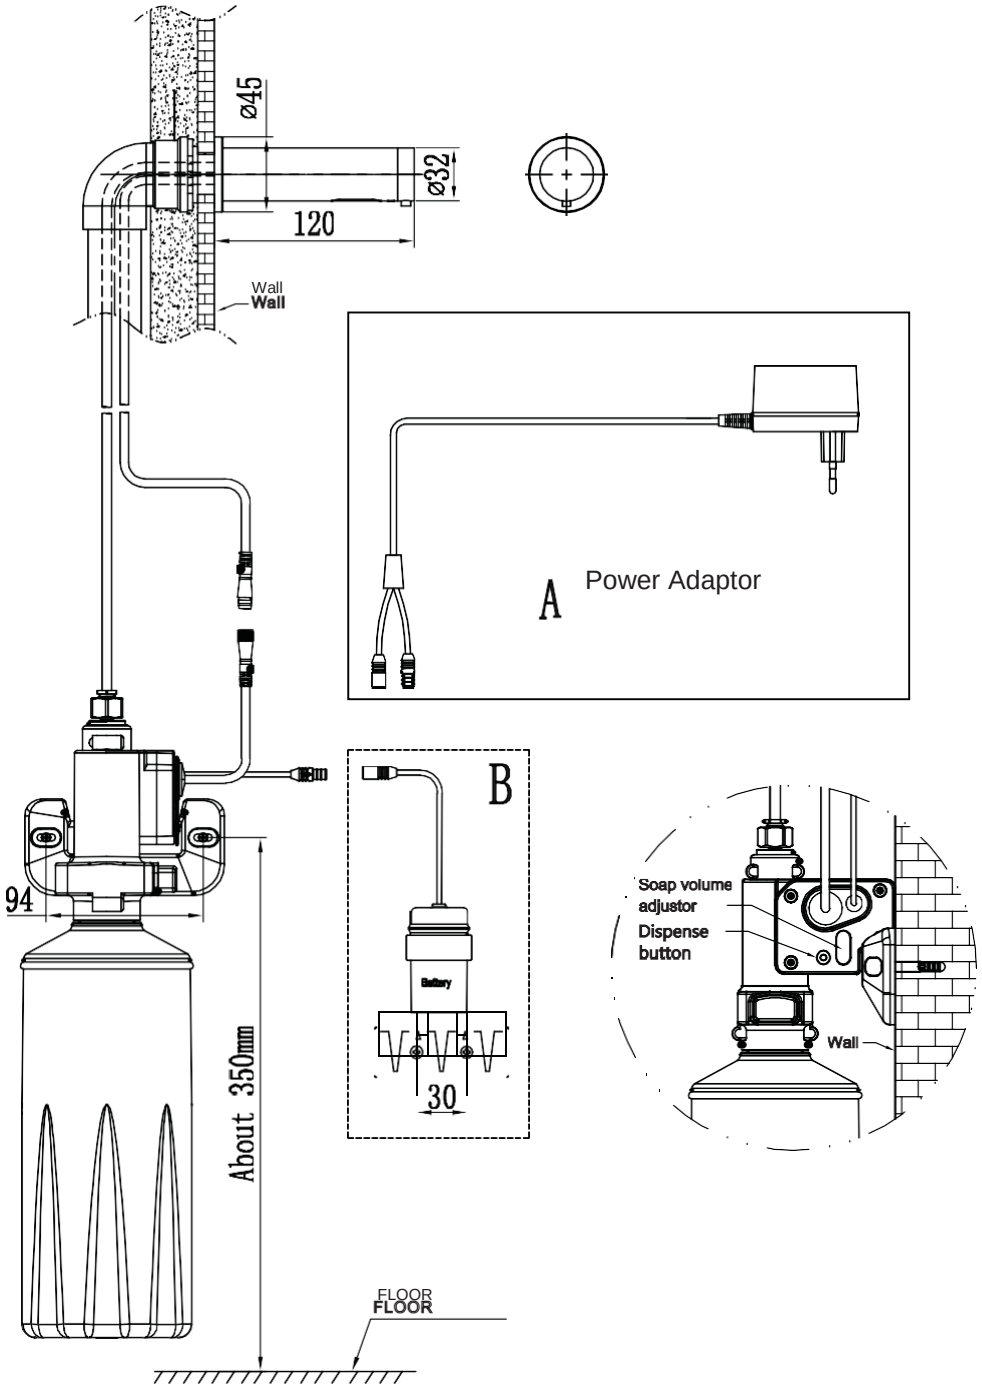

CARE AND CLEANING


Light Cleaning

Gently wipe away dirt from the water outlet, soap outlet, and sensor window with a soft cloth that has been soaked in cold or warm water and wrung out.

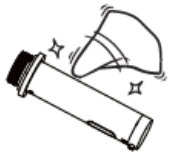


Heavy-Duty Cleaning

Wipe away debris with a soft cloth dampened with a suitable amount of diluted neutral detergent, then wipe the surface again with a cloth rinsed in clean water. When cleaning around the sensor, please be careful not to scratch the surface of the sensor window.

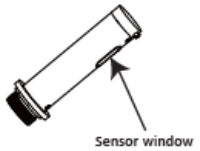

Water Outlet and Soap Outlet Cleaning

Gently brush away dirt from the water outlet and soap outlet with a soft brush.

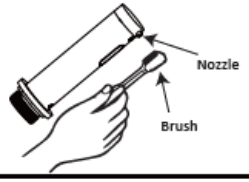

Notice


Do not use detergents or cleaning tools that may damage the exterior surfaceor sensor window. For example:
1) Acidic detergents, chlorine-based bleach, or alkaline detergents.
2) Detergents containing abrasive particles, such as polishing powder.
3) Paint thinner or benzene-based solvents.
4) Abrasive tools such as nylon brushes or steel wool.



CUIDADO Y LIMPIEZA

Limpieza ligera

Limpie suavemente la suciedad de la salida de agua, la salida dejabón y la ventana del sensor con un paño suave humedecido enagua fría o tibia y bien escurrido.

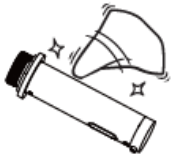


Limpieza Profunda

Elimine los residuos con un paño suave humedecido en una cantidad adecuada de detergente neutro diluido; luego, limpie la superficie nuevamente con un paño enjuagado en agua limpia. Al limpiar alrededor del sensor, tenga cuidado de no rayar la superficie de la ventana del sensor.



Limpieza de las Salidas de Agua y Jabón

Retire suavemente la suciedad de la salida de agua y de la salida de jabón con un cepillo suave.

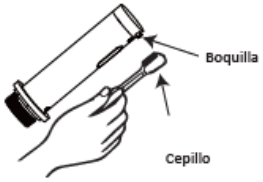

Aviso

No utilice detergentes ni utensilios de limpieza que puedan dañar la superficie exterior o la ventana del sensor.Por ejemplo:
1) Detergentes ácidos, lejía clorada o detergentes alcalinos.
2) Detergentes con partículas abrasivas, como polvo para pulir.
3) Diluyente de pintura (thinner) o solventes a base de benceno.
4) Herramientas abrasivas como cepillos de nailon o lana de acero.

